







9453 Owensmouth Ave., Chatsworth, CA 91311 USA  
Phone: +1 800 377 4532 | Fax: +1 818 734 8199  
currietechnology.com | izipusa.com | ezipusa.com  
sales@currietechnology.com | sales@izipusa.com


# Folding Instructions


- 1 use the key to unlock the battery, then lift it out of the frame





- 2 fold the pedals by pushing the black portion towards the frame, then swinging it down. repeat for opposite side


- 3 open the seat post quick release, then lower the saddle completely


- 4 slide the top handlebar section down completely and lock in place


- 5 open the quick release securing the handlebar hinge, slide the pin sideways, then fold the bars down


- 6 open the quick release securing the frame hinge, swing back the lever, then lift the pin up to fold the frame



\*see owner's manual for more detailed information on all topics